

MODEL MW-675


CONVERTER RS-485 TO



USB To RS485/422 converter allows PC users to connect their RS-485/422 devices to systems that use USB interface. By attaching the converter to a PC, it will no longer be necessary to open the chassis or turn off the PC to install the hub. With the converter, the user instantly gets one extra high-speed RS-485 or RS-422 ports. In addition, since the power is derived from the USB port, there are not any cumbersome power adapters. This makes the converter especially suitable for PLCs, printers, POS system and industrial control devices.

Compatibility connection	: USB v2.0 standard and LED status transfer signal
Network connector	: RS-485/RS422 to USB-type automatic connector
Data transfer	: Automatic direction port control
Wire connection port	: Screw terminal
Parity bit Transmission	: odd, even, none
speed Data bit	: 600bps to 115.2Kbps
Stop bit	: 5, 6, 7, 8
Driver Support Power	: 1, 1.5, 2
Consumption Max	: Windows 2000/2003/XP/Vista/7
Distance Operating	: 1.5W @ 5V
Temperature Operating	: 4000ft (1200m) @ 19.2Kbps
Humidity	: -20°~+65°
	: 20% to 95% (non-condensing)

PICTURE

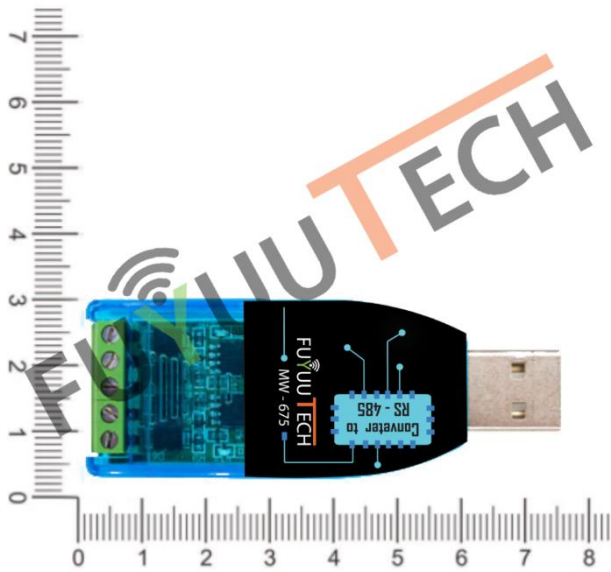

Front



Black